

**CREATIVE MARK®** artist products


# Canvas Print Racks

## Parts & Hardware

- A1** Left Side Legs (identical to A2)
  - A2** Right Side Legs (identical to A1)
  - B** Long Support Rods (×2)
  - C** Short Support Rod (×1)
  - D** Bolts (×6)
  - E** Connecting Poles (×2)
  - F** Canvas Support Fabric (×1)
- Allen Wrench** (included)



Use the included Allen wrench to tighten all bolts.

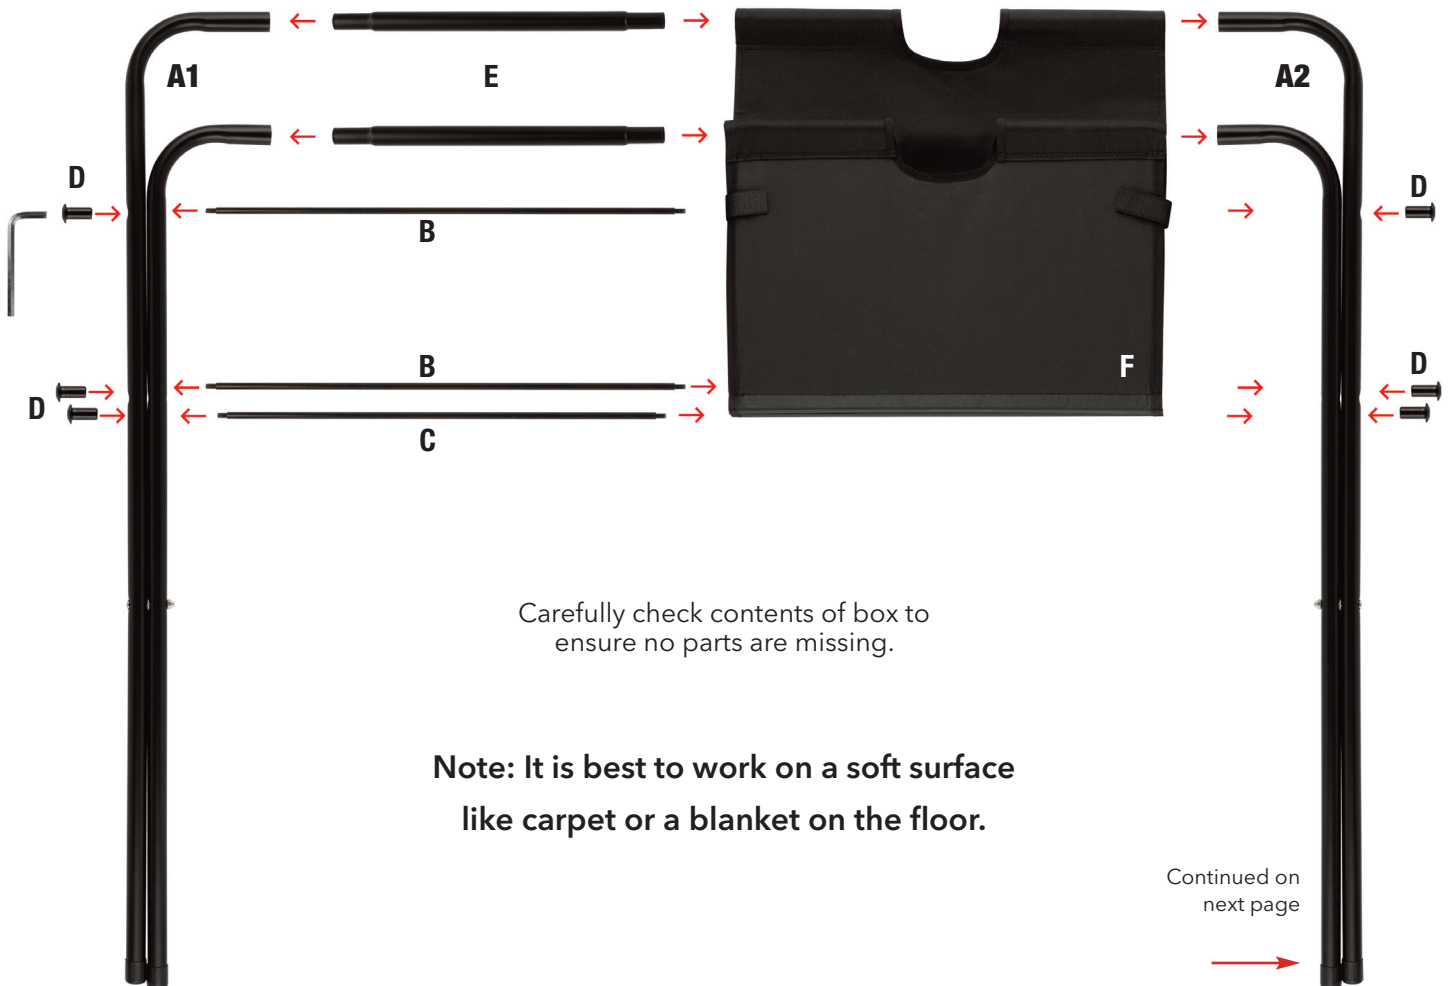


# Assembly Instructions

Carefully read through all steps before proceeding.


## STEP 1

Insert both long support rods (B) into the open holes of the taller leg of Part A1. Secure them with 2 bolts (D) using the Allen wrench for tightening.

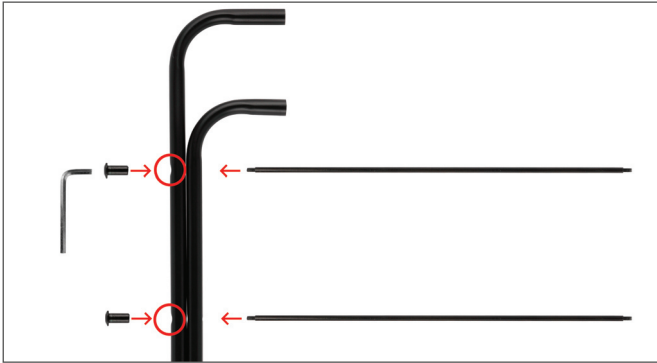


## STEP 2

Attach the shorter support rod (C) to the shorter leg of Part A1 using another bolt (D).

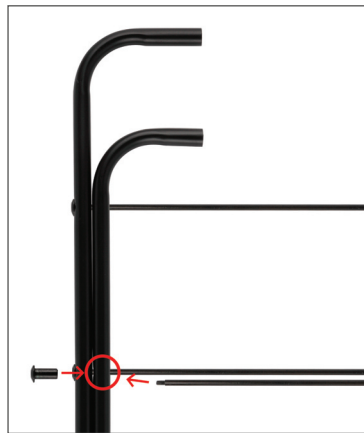


## STEP 3

Insert the 2 connecting poles (E) into the top openings of the left side legs (A1).

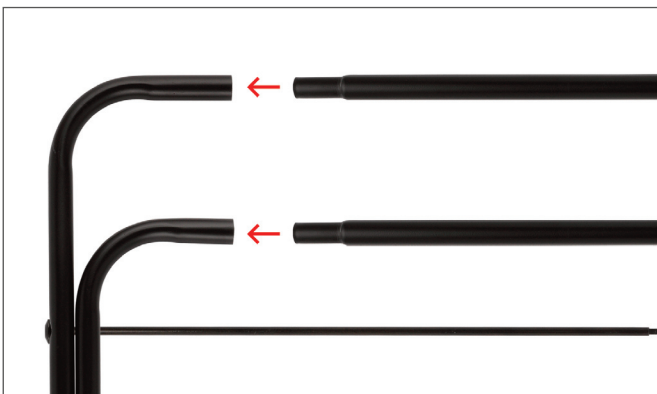

## STEP 4

Match up the sewn channels of the canvas support fabric (F) with the corresponding support rods (B, C). The fabric should be folded with the shiny side of the fabric facing out. Then, slide the canvas support fabric (F) over the corresponding rods (B, C). As the rods slide into place, the corresponding connecting poles (E) also need to slide into the larger channels at the top of the fabric. You may need to slide each rod and pole in a little at a time. Please note, the upper long support rod (B) should pass behind (outside) the fabric cover (F).

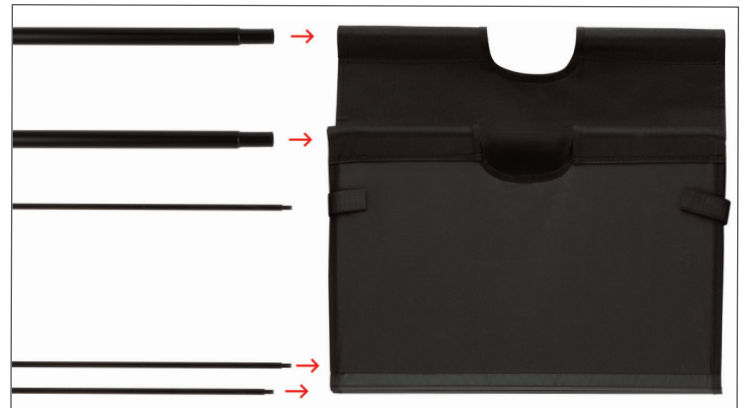

## STEP 5

Align the other ends of the support rods (B, C) and connecting poles (E) with the corresponding holes of the right side legs (A2) and secure them with the final 3 bolts (D).

